



Customer Safety and Operation Guide

Electric Eel®

Electric Eel Model CA-3A
3 Ft. Toilet Auger

Email: info@electriceel.com

Website: www.electriceel.com

WARNING

Safety Topics



Read and understand all safety and operational guidelines before operating this machine. Failure to follow safety and operations guide could result in death or serious injury. Please visit www.electriceel.com for the manufacturers operation and safety manual for the Model CA-3A.

Safety Checklist



DANGER!!!

TO PREVENT SERIOUS BODILY INJURY:

1. **ALWAYS** wear heavy leather gloves and safety glasses when operating equipment.
2. **ALWAYS** avoid contact of skin, facial area and especially eyes with drain water.

WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.



Customer Safety and Operation Guide

Electric Eel®

Electric Eel Model CA-3A
3 Ft. Toilet Auger

Email: info@electriceel.com

Website: www.electriceel.com

WARNING

GENERAL SAFETY – ROTATING CABLES AND EQUIPMENT



DANGER!!!

TO PREVENT SERIOUS BODILY INJURY AND TO AVOID DANGER FROM ROTATING CABLES AND EQUIPMENT:

1. **USE CAUTION AT ALL TIMES.**
2. **NEVER** handle any cable under tension.
3. **DO NOT** continue operating tool when cable is stuck in line.
4. **NEVER** force cable into a blockage.
5. **ALWAYS** wear heavy leather gloves and safety glasses.



Customer Safety and Operation Guide


Electric Eel®

Electric Eel Model CA-3A
3 Ft. Toilet Auger

Email: info@electriceel.com

Website: www.electriceel.com

Tool Application: Extra flexible 3 Ft. "music wire" cable works well in all types of toilets.

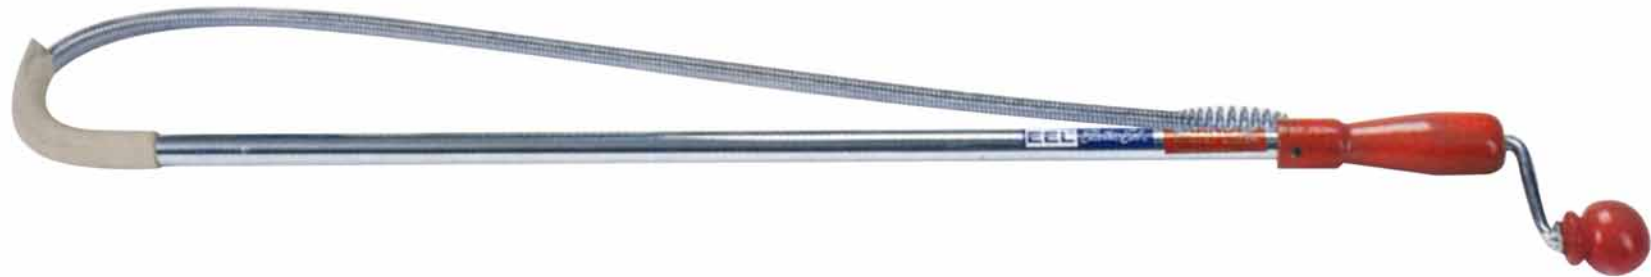

Follow the steps below to operate the tool

Step	Action
1	Insert cable into bowl with crank handle extended to its limit.
2	Turn the crank handle clockwise to work the cable through the passage until the obstruction is either forced down the line or caught and removed by pulling back on the handle.
3	If cable head becomes lodged, turn the crank handle counterclockwise to relieve tension and start procedure again.

OPERATOR'S MANUAL and MORE INFORMATION AVAILABLE AT:

Website: www.electriceel.com

Toll-Free: 800-833-1212